

YDP-S51 Quick Operation Guide

While holding down the [DEMO/SONG] or [PIANO/VOICE] button, press one of the highlighted keys shown below to select a Demo Song or set a parameter. (Refer to Diagrams 1 and 2 below.)

1



Quick Play												Demo Songs												50 Preset Songs (50 greats for the Piano)												Song Data Loaded from the Computer																																								
Off												Grand Piano 1												Song No. 1												Song No. 1																																								
A [#] -1	C ⁰	D ⁰	F ⁰	G ⁰	A ⁰	C ¹	D ¹	E ¹	F ¹	G ¹	A ¹	C ²	D ²	E ²	F ²	G ²	A ²	C ³	D ³	E ³	F ³	G ³	A ³	C ⁴	D ⁴	E ⁴	F ⁴	G ⁴	A ⁴	C ⁵	D ⁵	E ⁵	F ⁵	G ⁵	A ⁵	C ⁶	D ⁶	E ⁶	F ⁶	G ⁶	A ⁶																																			
B-1	C ⁰	D ⁰	E ⁰	F ⁰	G ⁰	D ¹	E ¹	F ¹	G ¹	A ¹	B ¹	D ²	E ²	F ²	G ²	A ²	B ²	D ³	E ³	F ³	G ³	A ³	B ³	D ⁴	E ⁴	F ⁴	G ⁴	A ⁴	B ⁴	D ⁵	E ⁵	F ⁵	G ⁵	A ⁵	B ⁵	D ⁶	E ⁶	F ⁶	G ⁶	A ⁶	B ⁶																																			
						Grand Piano 2	Grand Piano 3	E.Piano 1	E.Piano 2	Harpsichord	Pipe Organ	String	String	String	String	String	String	Song No. 2	Song No. 3	Song No. 4	Song No. 5	Song No. 6	Song No. 7	Song No. 8	Song No. 9	Song No. 10	Song No. 11	Song No. 12	Song No. 13	Song No. 14	Song No. 15	Song No. 16	Song No. 17	Song No. 18	Song No. 19	Song No. 20	Song No. 21	Song No. 22	Song No. 23	Song No. 24	Song No. 25	Song No. 26	Song No. 27	Song No. 28	Song No. 29	Song No. 30	Song No. 31	Song No. 32	Song No. 33	Song No. 34	Song No. 35	Song No. 36	Song No. 37	Song No. 38	Song No. 39	Song No. 40	Song No. 41	Song No. 42	Song No. 43	Song No. 44	Song No. 45	Song No. 46	Song No. 47	Song No. 48	Song No. 49	Song No. 50	1st song	2nd song	3rd song	4th song	5th song	6th song	7th song	8th song	9th song	10th song


2



I.A.C. Depth												Voices												Reverb Types		Damper Resonance		Reverb Depth												Octave Shift (Dual/Duo mode)					Volume Balance (Dual/Duo mode)					Touch Sensitivity															
-3												Grand Piano 1												Room		Off		0												-1 (Voice 1)					-1 (Voice 1)					Fixed															
A [#] -1	C ⁰	D ⁰	F ⁰	G ⁰	A ⁰	C ¹	D ¹	E ¹	F ¹	G ¹	A ¹	C ²	D ²	E ²	F ²	G ²	A ²	C ³	D ³	E ³	F ³	G ³	A ³	C ⁴	D ⁴	E ⁴	F ⁴	G ⁴	A ⁴	C ⁵	D ⁵	E ⁵	F ⁵	G ⁵	A ⁵	C ⁶	D ⁶	E ⁶	F ⁶	G ⁶	A ⁶	C ⁵	D ⁵	E ⁵	F ⁵	G ⁵	A ⁵	C ⁶	D ⁶	E ⁶	F ⁶	G ⁶	A ⁶	C ⁶	D ⁶	E ⁶	F ⁶	G ⁶	A ⁶						
B-1	C ⁰	D ⁰	E ⁰	F ⁰	G ⁰	D ¹	E ¹	F ¹	G ¹	A ¹	B ¹	D ²	E ²	F ²	G ²	A ²	B ²	D ³	E ³	F ³	G ³	A ³	B ³	D ⁴	E ⁴	F ⁴	G ⁴	A ⁴	B ⁴	D ⁵	E ⁵	F ⁵	G ⁵	A ⁵	B ⁵	D ⁶	E ⁶	F ⁶	G ⁶	A ⁶	B ⁶	D ⁵	E ⁵	F ⁵	G ⁵	A ⁵	B ⁵	D ⁶	E ⁶	F ⁶	G ⁶	A ⁶	B ⁶	D ⁶	E ⁶	F ⁶	G ⁶	A ⁶	B ⁶	D ⁶	E ⁶	F ⁶	G ⁶	A ⁶	B ⁶
						Grand Piano 2	Grand Piano 3	E.Piano 1	E.Piano 2	Harpsichord	Pipe Organ	String	String	String	String	String	Room	Hall 1	Hall 2	Stage	Off	Off	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	Most suitable for the selected voice	-1 (Voice 1)	+1 (Voice 1)	0 (Voice 2)	+1 (Voice 2)	-5	-4	-3	-2	-1	0	+1	+2	+3	+4	+5	+6	Fixed	Medium	Hard		

3

While holding down the [PIANO/VOICE] button, simultaneously press the [+ R] and [- L] buttons to turn Duo on or off.

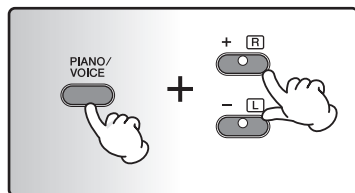

YDP-S51 Quick Operation Guide

4 While holding down the [METRONOME] button, press one of the highlighted keys shown below to set a parameter.

METRONOME +

Metronome Volume	Metronome Beat	Tempo (Metronome, Songs, etc.)
1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20	0, 2, 3, 4, 5, 6	Number key 0, Number key 1, Number key 2, Number key 3, Number key 4, Number key 5, Number key 6, Number key 7, Number key 8, Number key 9, 10steps decrease, Default tempo, 10steps increase, 1step increase

Key labels: A-1 B-1 C0 D0 E0 F0 G0 A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7

5 While holding down the [DEMO/SONG] and [PIANO/VOICE] buttons, press one of the highlighted keys shown below to set a parameter.

DEMO/SONG
PIANO/VOICE +

Tuning	MIDI Transmit Channel	Transpose	MIDI Receive Channel	Local Control	Program Change	Control Change	Song Playback Channel
442.0 Hz	Ch 1, Ch 2, Ch 3, Ch 4, Ch 5, Ch 6, Ch 7, Ch 8, Ch 9, Ch 10, Ch 11, Ch 12, Ch 13, Ch 14, Ch 15, Ch 16, off	-6, -5, -4, -3, -2, -1, 0 (Normal pitch), +1, +2, +3, +4, +5, +6	Ch 1, Ch 2, Ch 3, Ch 4, Ch 5, Ch 6, Ch 7, Ch 8, Ch 9, Ch 10, Ch 11, Ch 12, Ch 13, Ch 14, Ch 15, Ch 16, Ch 1+2	Enable, Disable	On / Off, On / Off	All	All, Ch 1+2

Key labels: A-1 B-1 C0 D0 E0 F0 G0 A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7

6 While holding down the [DEMO/SONG] and [PIANO/VOICE] buttons, press the [+ R], [- L] or both buttons as shown below to fine tune the pitch of your instrument.

To tune up (in about 0.2 Hz steps):

To tune down (in about 0.2 Hz steps):

Default pitch: 440.0Hz