

【資料】楽器別

Drum Kit SFX Kit	Live! StudioKit	互換 範囲	SFXKit1	互換 範囲	SFXKit2	互換 範囲	ArabicKit	互換 範囲	Live! CubanKit	互換 範囲	Live! PopLatinKit	互換 範囲	
13	C#-1	Surdo Mute	30	no sound	no sound		no sound		no sound		no sound		
14	D-1	Surdo Open	35										
15	D#-1	Hi Q	21										
16	E-1	Whip Slap	24										
17	F-1	Scratch H	24										
18	F#-1	Scratch L	24								Hand Clap	24	
19	G-1	Finger Snap	16										
20	G#-1	Click Noise	16										
21	A-1	Metronome Click	25										
22	A#-1	Metronome Bell	18						Conga H Tip	24	Conga H Tip	24	
23	B-1	Seq Click L	12						Conga H Heel	24	Conga H Heel	24	
24	C0	Seq Click H	12	no sound	no sound		Nakarazan Dom	34	Conga H Open	27	Conga H Open	27	
25	C#0	Brush Tap	24				Cabasa	15	Conga H Mute	27	Conga H Mute	27	
26	D0	Brush Swirl	12				Nakarazan Edge	39	Conga H SlapOpen	24	Conga H SlapOpen	24	
27	D#0	Brush Slap	24				Hager Dom	39	Conga H Slap	24	Conga H Slap	24	
28	E0	Brush Tap Swirl	12				Hager Edge	36	Conga H SlapMute	24	Conga H SlapMute	24	
29	F0	Snare Roll	19				Bongo H	37	Conga L Tip	24	Conga L Tip	24	
30	F#0	Castanet	30				Bongo L	37	Conga L Heel	24	Conga L Heel	24	
31	G0	Snare Studio L	27				Conga H Mute	17	Conga L Open	24	Conga L Open	24	
32	G#0	Sticks	22				Conga H Open	24	Conga L Mute	27	Conga L Mute	27	
33	A0	Kick Ambience H	28				Conga L	24	Conga L SlapOpen	24	Conga L SlapOpen	24	
34	A#0	Open Rim Shot	24				Zagrouda H	23	Conga L Slap	27	Conga L Slap	27	
35	B0	Kick Ambience L	23				Zagrouda L	32	Conga L Slide	24	Conga L Slide	24	
36	C1	Kick Studio	22	Cutting Noise 1	26	Phone Call	45	Kick Soft	30	Bongo H Open 1 f	24	Bongo H Open 1 f	24
37	C#1	Side Stick	24	Cutting Noise 2	20	Door Squeak	34	Side Stick	24	Bongo H Open 3 f	27	Bongo H Open 3 f	27
38	D1	Snare Studio M	27	no sound		Door Slam	39	Snare Soft	19	Bongo H Rim	27	Bongo H Rim	27
39	D#1	Hand Clap	24	String Slap	31	Scratch Cut	33	Arabic Hand Clap	24	Bongo H Tip	27	Bongo H Tip	27
40	E1	Snare Studio L	22	no sound		Scratch H 3	24	Snare Drum	24	Bongo H Heel	27	Bongo H Heel	27
41	F1	Floor Tom L	24			Wind Chime	18	Floor Tom L	30	Bongo H Slap	27	Bongo H Slap	27
42	F#1	Hi-Hat Closed	6			Telephone Ring	30	Hi-Hat Closed	6	Bongo L Open 1 f	24	Bongo L Open 1 f	24
43	G1	Floor Tom H	24					Floor Tom H	31	Bongo L Open 3 f	27	Bongo L Open 3 f	27
44	G#1	Hi-Hat Pedal	6					Hi-Hat Pedal	6	Bongo L Rim	27	Bongo L Rim	27
45	A1	Low Tom	21					Low Tom	28	Bongo L Tip	27	Bongo L Tip	27
46	A#1	Hi-Hat Open	6					Hi-Hat Open	6	Bongo L Heel	27	Bongo L Heel	27
47	B1	Mid Tom L	24					Mid Tom L	32	Bongo L Slap	27	Bongo L Slap	27
48	C2	Mid Tom H	21	no sound	no sound			Mid Tom H	29	Timble L Open	27	Timble L Open	27
49	C#2	Crash Cymbal 1	15					Crash Cymbal 1	14	no sound		no sound	
50	D2	High Tom	24					High Tom	31				
51	D#2	Ride Cymbal 1	13					Ride Cymbal 1	15				
52	E2	Chinese Cymbal	15	Flute Key Click	33	CarEngn Ignition	32	Crash Cymbal 2	14				
53	F2	Ride Cymbal Cup	16	no sound		Car Tires Squeal	34	Duhulla Dom	24	Paila L	13	Paila L	13
54	F#2	Tambourine	4			Car Passing	34	Tambourine	4	Timbale H Open	27	Timbale H Open	27
55	G2	Splash Cymbal	7			Car Crash	35	Duhulla Tak	24				
56	G#2	Cowbell	20			Siren	10	Cowbell	20				
57	A2	Crash Cymbal 2	14			Train	40	Duhulla Sak	24				
58	A#2	Vibraslap	19			Jet Plane	24	Claves	31				
59	B2	Ride Cymbal 2	13			Starship	4	Doff Dom	24	Paila H	13	Paila H	13
60	C3	Bongo H	24	no sound		Burst	6	Kattem Dom	24	Cowbell Top	20	Cowbell Top	20
61	C#3	Bongo L	24			Roller Coaster	20	Kattem Tak	32	no sound		no sound	
62	D3	Conga H Mute	24			Submarine	63	Kattem Sak	32				
63	D#3	Conga H Open	27			no sound		Kattem Tak	32				
64	E3	Conga L	24					Doff Tak	36	Guiro Short	20	Guiro Short	20
65	F3	Timbale H	27					Tabla Dom	24	Guiro Long	20	Guiro Long	20
66	F#3	Timbale L	27					Tabla Tak 1	24				
67	G3	Agogo H	24					Tabla Tik	34				
68	G#3	Agogo L	26	Shower	24	Laugh	34	Tabla Tak 2	24	Tambourine	4	Tambourine	4
69	A3	Cabasa	6	Thunder	41	Scream	30	Tabla Sak	24				
70	A#3	Maracas	7	Wind	37	Punch	34	Tabla Roll Edge	24				
71	B3	Samba Whistle H	17	Stream	29	Heart Beat	36	Tabla Flam	32				
72	C4	Samba Whistle L	18	Bubble	46	Foot Steps	33	Sagat 1	6	Maracas	6	Maracas	6
73	C#4	Guiro Short	19	Feed	63	no sound		Tabel Dom	32	Shaker	6	Shaker	6
74	D4	Guiro Long	19	no sound				Sagat 3	6	Cabasa	6	Cabasa	6
75	D#4	Claves	31					Tabel Tak	39	no sound		Cuica Mute	22
76	E4	Wood Block H	33					Sagat 2	6			Cuica Open	19
77	F4	Wood Block L	39					Rik Dom	36			no sound	
78	F#4	Cuica Mute	19					Rik Tak 2	36				
79	G4	Cuica Open	22					Rik Finger 1	34				
80	G#4	Triangle Mute	5					Rik Tak 1	22				
81	A4	Triangle Open	3					Rik Finger 2	34			Triangle Mute	4
82	A#4	Shaker	6					Rik BrassTremolo	19			Triangle Open	4
83	B4	Jingle Bells	14					Rik Sak	36				
84	C5	Bell Tree	2	Dog	33	Machine Gun	21	Rik Tik	34	no sound		Wind Chime	2
85	C#5	no sound		Horse	33	Laser Gun	19	no sound				no sound	
86	D5			Bird Tweet	30	Explosion	44						
87	D#5			no sound		Firework	39						
88	E5					no sound							
89	F5												
90	F#5			Ghost	28								
91	G5			Maou	56								

ドラムピッチコースの値が、資料の“互換範囲”とされている数値以下に設定されていれば、ELS-01とELS-02のデータ互換性を保つことができます。

【資料】楽器別互換表

Drum Kit SFX Kit	Standard Kit 1 Live!Std Kit Live!Std+P Kit	互換 範囲	
13	C#-1	Surdo Mute	30
14	D-1	Surdo Open	35
15	D#-1	Hi Q	21
16	E-1	Whip Slap	24
17	F-1	Scratch H	24
18	F#-1	Scratch L	24

(資料の読み方)
Standard Kit 1のSuro Muteは、ピッチコース値が“+30”以下であれば、互換性を保つことができます。